

## Power Vent Pressure Switch Replacement Instructions


- 1. Turn ON/OFF switch on the the control box to "OFF".
- Remove outer door covering gas thermostat and burner assembly.
- 3. Set the thermostat to its lowest setting by turning the water temperature dial clockwise ( ) to its lowest temperature setting.
- Turn the gas control knob clockwise ( ) to the "OFF" position. The knob cannot be turned from "PILOT" to "OFF" unless the knob is depressed slightly. DO NOT FORCE.
- 5. Remove the outer door covering the control box.
- Loosen the white plastic nut securing the plastic pressure switch to blower motor tubing and remove the tubing from the pressure switch.
- 7. Disconnect the three wires from the pressure switch.

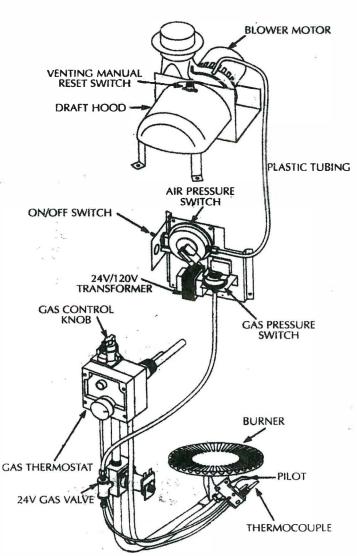

 To remove the (old) pressure switch from the control box, loosen the two sheet metal screws at the upper left and right hand corners of the switch.

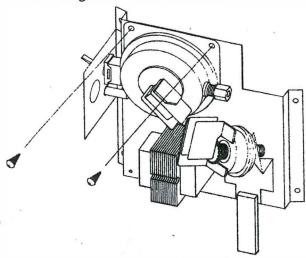


9. Place the new switch in place as shown and secure it by using one of the sheet metal screws,

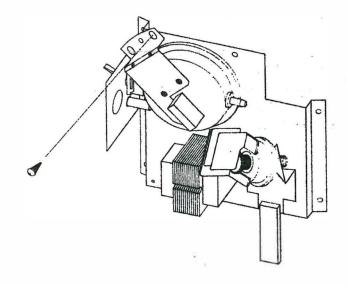

## Power Vent Pressure Switch Replacement Instructions (cont'd)

.10. Refer to the wiring diagram and plug the three wires back in place on the pressure switch.

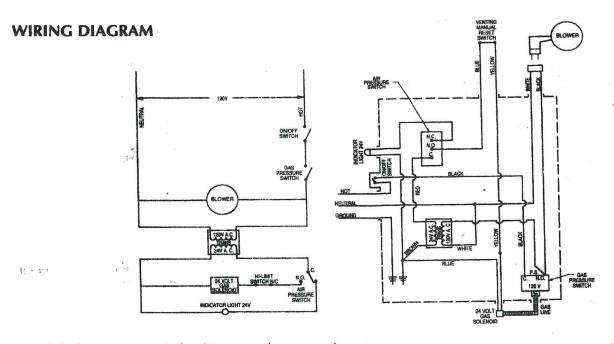

- 11. Slide the pressure switch tubing over the connection of the new pressure switch.
- 12. Replace the control box outer door.
- 13. Follow the lighting instructions found adjacent to the control box and outer door.

