





WM Modular Metering Main Tenant Breakers Accessories

LIST PRICES AND CATALOG NUMBERS						
Main Tenant Breakers - Plug-On - 2 Pole Units ^① (WM, W3M, W35M)					3-Pole Units (W37M)	
Ampere Rating	10,000 AIC	22,000 AIC	Special Application ^②		10,000 AIC	22,000 AIC
	Catalog Number	Catalog Number	10,000 AIC Catalog Number	22,000 AIC Catalog Number	Catalog Number	Catalog Number
60	BR260	BRH260	QCW260	HQCW2100	BR360	BRH360
70	BR270	BRH270	QCW270		BR370	BRH370
80	BR280	—	—		—	—
90	BR290	BRH290	QCW290		BR390	BRH390
100	BR2100	BRH2100	QCW2100		BR3100	BRH3100
110	BR2110	BRH2110	—	—	—	—
125	BR2125	BRH2125	—	—	—	—
125	WFP2125	WFPH2125	Typical Wire Ranges		WFP3125	WFPH3125
150	WFP2150	WFPH2150	BR - #4-1/0		WFP3150	WFPH3150
175	WFP2175	—	WFP - #1-300 MCM		WFP3175	—
200	WFP2200	WFPH2200	—		WFP3200	WFPH3200

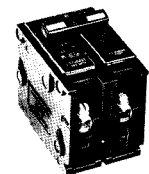

BR260

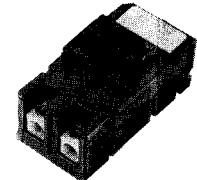

WFP2200




WFP3200




QCW260

^① 125A meter positions require BR type breakers. 250A meter positions require WFP or QCW type.
^② Required for use on 200 amp rated meter position, when tenant mains are rated below 100 amps.


ACCESSORIES	
Description	Catalog Number
Corner Section 800A, 1Ø, 3W, or 3Ø, 4W; Indoor or Outdoor; For Use on Facing Surfaces of Adjacent Walls; 16" High, 13 7/16" from Modules to Corner of Room	W3MCSR
Transition Section^① 1200 Amp, 3Ø, 4 Wire - Capable of Matching Horizontal Bus Bars of Previous Design (QS, QSC) with those of new WM Design. (Retrofit) (6" Wide) Right Hand (3-Phase) Left Hand (3-Phase) Single Phase: Right Hand Left Hand	TXR TXL TXR1 TXL1
Spacer Used to Increase Clearance Between Meter Modules and Main Device (6" Wide)	WSSKR
Closure Plates: (Utility Sealable) Left End Right End	WLHCP WRHCP
Sealing Rings: Screw Type Snap Type Stainless Steel	WTSR WSR STSR1
Filler Plate, 125A Max. Breaker Position Filler Plate, 150-200A Breaker Position 5th Jaw (Potential), 3, 6 or 9 O'clock Position 5th Jaw (Isolated), For Off-Peak Metering Plastic Cover Plate Ringless Style Metal Cover Plate Manual By-Pass Kit Horn Type Manual By-Pass	WFP1C, FP1 WFP3Q WM5J WM5JOP WCP WCPRL WMBP WMBPHT
Ground and Bonding Kit for W3TB8R Ground and Bonding Kit for W3TB6R	WGBK1 WGBK2
Commercial Metering Only	
2 Pole Tenant Main Conversion Kit 3 Pole Tenant Main Conversion Kit WFP to BR 100A Max. Meter Opening Blank-Off Kit	W35CB125 W37CB125 W37CP
Totalizing Jumper Kit (Field Installed) Meter Barrier Kit (Field Installed)	W37JK W37BK

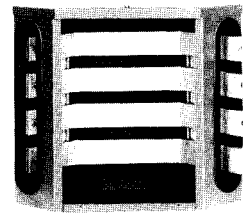


W3MCSR

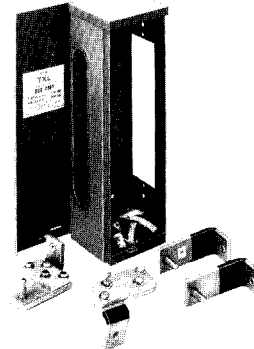


TXL

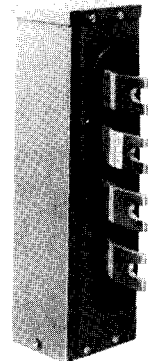

WSSKR

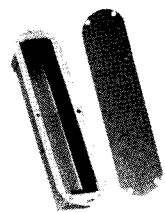

WLHCP, WRHCP

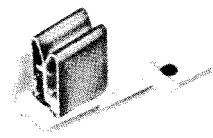


WM5J




WTSR




WSR

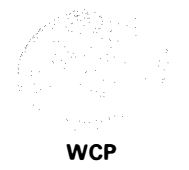


WCP

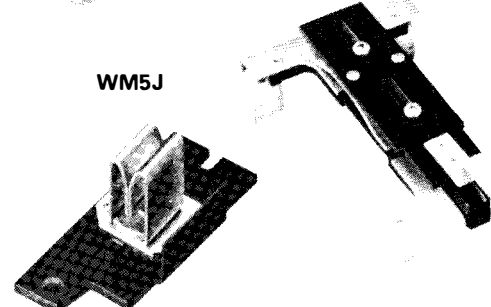

WMBP

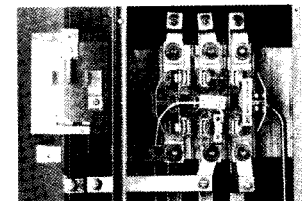


W37CB125 (Installed)

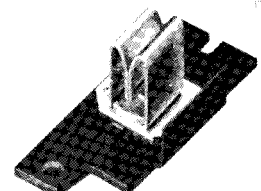

W37BK



WGBK2

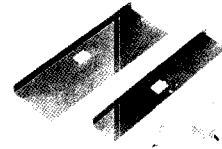

WGBK1

^① QS on left - WM on right, use TXR, TXR1.
Q S on right - WM on left, use TXL, TXL1.

Full range of replacement parts are available through Catalog 30-390.