

# 1

## Low voltage, branch circuit fuses

Holders and blocks for branch circuit fuses

Class	Fuses	Volts	Page
J, CF	TCF*, FCF, WCF	600V	1-10
	LPJ-SP	600V	1-19
	JKS	600V	1-20

\*Class J performance

### Holders

- TCFH CUBEFuse holder, panel/DIN-Rail mount . . . . . 1-16
- CH Class J modular 1- to 3-pole, panel/  
DIN-Rail mount . . . . . 9-11
- Safety J™ modular holders,  
panel/DIN-Rail mount . . . . . 9-14

### Blocks

- Power distribution fuse block . . . . . 9-22
- Modular knifeblade fuse blocks 250/600V, panel mount . . 9-17
- JM600, panel/DIN-Rail mount . . . . . 9-24
- JP pyramid blocks, panel mount . . . . . 9-31
- Modular type fuse blocks 600V, panel mount . . . . . 9-41
- BH modular-style open blocks, panel mount . . . . . 9-41



Class	Fuses	Volts	Page
Plug fuses	W, TL, T, P and TC	125V	1-34 - 1-36

### Box cover units

- Standard electrical box mounting . . . . . 9-42



### Fuse reducers for Class R fuses 250V

Equipment fuse clip amps	Desired fuse (case) amp size	Catalog no. (pairs) 250V
60	30	NO.263-R
100	30	NO.213-R
	60	NO.216-R
200	60	NO.226-R
	100	NO.2621-R
400	100	NO.2641-R
	200	NO.242-R
600	100	NO.2661-R
	200	NO.2662-R
	400	NO.2664-R*

\*Single reducer only (pair not required).

### Fuse reducers for Class R fuses 600V

Equipment fuse clip amps	Desired fuse (case) amp size	Catalog no. (pairs) 600V
60	30	NO.663-R
100	30	NO.216-R
	60	NO.616-R
200	60	NO.626-R
	100	NO.2621-R
400	100	NO.2641-R
	200	NO.642-R
600	100	NO.2661-R
	200	NO.2662-R
	400	NO.2664-R*

\*Single reducer only (pair not required).



**Fuse reducers for Class J fuses:  
LPJ, DFJ, JKS**

**Catalog numbers**

Catalog numbers (pair) reducer No.	Fuse amp size range	Equipment/fuse block amp size
J-63	1-30	60
J-13	1-30	100
J-16	35-60	100
J-26	35-60	200†
J-21	70-100	200†
J-41	70-100	400†
J-42	110-200	400†
J-62	110-200	600†
J-64	225-400	600†

†Not for bolt-on applications.

**Fuse reducers for Class R fuses:  
FRN-R, LPN-RK, FRS-R, LPS-RK  
KTN-R, KTS-R**

UL Listed File E12853

**Catalog numbers**

Catalog numbers (pairs)

Voltages		Fuse amp size range	Equipment/fuse block amp size
250V	600V		
NO.263-R	NO.663-R	1-30	60
NO.213-R	NO.216-R	1-30	100
NO.216-R	NO.616-R	35-60	100
NO.226-R	NO.626-R	35-60	200
NO.2621-R	NO.2621-R	70-100	200
NO.2641-R	NO.2641-R	70-100	400
NO.242-R	NO.642-R	110-200	400
NO.2661-R	NO.2661-R	70-100	600
NO.2662-R	NO.2662-R	110-200	600
NO.2664-R**	NO.2664-R**	225-400	600

\*\*Single reducer only (pair not required).

**Fuse reducers for Class H and K fuses:  
NON, REN, NOS, RES**

UL Listed File E12853

**Catalog numbers**

Catalog numbers. (pairs)		Fuse amp size range	Equipment/fuse block amp size
250V reducer	600V reducer		
NO.263	NO.663	1-30	60
NO.213	NO.216	1-30	100
NO.216	NO.616	35-60	100
NO.226	NO.626	35-60	200
NO.2621	NO.2621	70-100	200
NO.2641	NO.2641	70-100	400
NO.2642	NO.2642	110-200	400
No. 2661	NO. 2661	70-100	600
No. 2662	NO. 2662	110-200	600
No. 2664	NO. 2664	225-400	600

Data Sheet: 1118



**Dummy fuse "neutrals":  
(These are not fuses)**

**Catalog numbers**

Catalog numbers	Fuse equivalent		
	Voltage	Dimension	Fuse amp size range
NNB	—	1 <sup>3</sup> / <sub>32</sub> " x 1 <sup>1</sup> / <sub>2</sub> "	—
NNB-R	—	Class CC	—
NNC	—	1/4" x 1 <sup>1</sup> / <sub>4</sub> "	—
NTN-R-30	250	Class R/H	1-30
NTN-R-60	250	Class R/H	35-60
NTN-R-100	250	Class R/H	70-100
NTN-R-200	250	Class R/H	110-200
NTN-R-400	250	Class R/H	225-400
NTN-R-600	250	Class R/H	450-600
NTS-R-30	600	Class R/H	1-30
NTS-R-60	600	Class R/H	35-60
NTS-R-100	600	Class R/H	70-100
NTS-R-200	600	Class R/H	110-200
NTS-R-400	600	Class R/H	225-400
NTS-R-600	600	Class R/H	450-600

Accessories