

# Thermostats—Parts and Accessories

## Parts and Accessories

Description	Use With	ORDER NUMBER
<b>Batteries:</b>		
Battery quick-charge kit.	T8082, T8182	192075A
Replacement battery pack, 2.2V. Replaces 191127 and 191127A. See 220985B.	T8082, T8182	191127B
Battery replacement kit. Includes battery, holder, leads, connectors and rechargeable Ni-Cad AAA battery. Replaces 193933, 193933A, and 195044 Batteries and Connectors.	T8082, T8182	220985B
<b>Cover Assemblies:</b>		
Cover Assembly, replacement cover, beige.	Beige T8190, T8195	202808B
Cover Assembly, replacement cover, Premier White.	Premier White T8195	202469C
Cover Assembly, replacement cover, beige.	Beige T8090, T8095	202808A
Cover Assembly, replacement cover	Premier White T8090, T8095	202469B
Cover Assembly, replacement cover for Chronotherm III, beige.	T8600, T8601, T8602, T8603, T8611, T8621, T8624	220529A
Cover Door Assembly, replacement, Premier White.	T8600, T8601, T8602, T8611, T8624, T8631	201206B
Replacement Flip-up Door, Premier White.	T8131, T8132	206658AA
Replacement Flip-up Door, taupe.		203255AA
Replacement Battery Door, Premier White.		206391AA
Replacement Battery Door, taupe.		206273AA
Replacement Door for Chronotherm IV, taupe	T8600, T8601, T8602, T8611, T8624	207396A
Replacement Door for Chronotherm IV, Premier White.		207396B
<b>Mounting Plates (for covering marks left by old thermostat):</b>		
Mounting Plate Assembly, beige. Includes cover plate, adapter ring and screws. Covers marks left by old thermostat. Allows mounting on vertical or horizontal outlet box. 6-9/10 in. x 4-3/4 in. (175 mm x 121 mm).	T810, T822, T834/Q634, T841, T874/Q674, T8090, T8095, T8190, Chronotherm III:T8600, T8601, T8602, T8603, T8611, T8621, T8624, TS8095	193121A
Mounting Plate Assembly, gray. Includes cover plate, adapter ring and screws. Covers marks left by old thermostat. Allows mounting on vertical or horizontal outlet box. 6-9/10 in. x 4-3/4 in. (175 mm x 121 mm). Use with Premier White thermostats.	T8090, T8195, Chronotherm III:T8600, T8601, T8602, T8611, T8621, T8624, Y8095, Y8195, Y8224	202689A
Wall Cover Plate; Premier White. Covers marks left by old thermostat.	T8131, T8132, Chronotherm III:T8600, T8611, T8624.	205224A
<b>Wallplates (for wiring thermostat or clock):</b>		
Wallplate, for millivolt applications.	TS8095A	191108AC
Wallplate, for two-wire cooling-only systems.	T8090, T8095, T8190	191108AD
Wallplate, for two-wire heating or three-wire, spdt heating. Includes Series 20 terminal identification for spdt, heating-only systems.	T8090, T8095, T8190	191108AG
Wallplate, for directly powering the clock.		191108AJ
<b>Wallplates (for covering marks left by old thermostat):</b>		
Wallplate, horizontal, beige; covers marks left by old thermostat.	T8034C beige models	200581A
Wallplate, horizontal, Premier White; covers marks left by old thermostat.	T8034C Premier White models	202895A
<b>Decorator Cover Plates (for covering marks left by old thermostat):</b>		
Decorator Cover Plate, 3-7/8 in. (98 mm) x 3-7/8 in. (98 mm); taupe.	T8400, T8401	209634A
Decorator Cover Plate, 3-7/8 in. (98 mm) x 3-7/8 in. (98 mm); Premier White.	T8400, T8401	209634B
Decorator Cover Plate, 5-3/4 in. (146 mm) x 5-3/4 in. (146 mm); taupe.	T8400, T8401	209635A
Decorator Cover Plate, 5-3/4 in. (146 mm) x 5-3/4 in. (146 mm); Premier White.	T8400, T8401	209635B

continued next page