

Accessories and Replacement Parts

Suitable for wet locations

 
Lampholder Replacement Parts



Inside Gasket No. 30697



Outside Gasket No. 30698

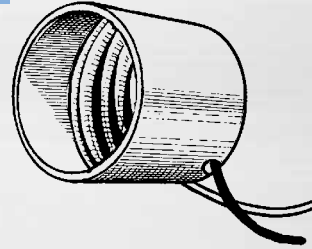

Porcelain Socket No. 40505

 
Gaskets

- 1 Gang switch
- 1 Gang blank
- 1 Gang single receptacle
- 1 Gang telephone

USE




30671

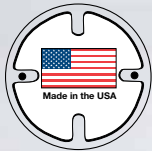


- 2 Gang blank
- 2 Gang switch
- 2 Gang duplex receptacle
- 2 Gang single receptacle
- 2 Gang, 1 switch & 1 duplex receptacle
- 2 Gang, 1 single & 1 duplex receptacle

 USE

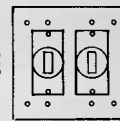


30672

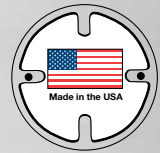 

- 1 Gang duplex receptacle
- 1 Gang skeleton (For GFI receptacles)
- 1 Gang louver

 
USE



30661

- 3 Gang switch
- 3 Gang blank

 USE



30673

- 4" Round Catalog No. 30690
(2½" inner diameter)

Replacement Parts for Garden Lights



3 Tier Glass
No. 40513

• Made in the U.S.A.



3 Tier Glass
No. 40514

• Made in the U.S.A.

Plastic Receptacle for Garden
Light No. 40509