

# Spring-Type Tube Benders



## Spring-Type Tube Benders

- Fast, free-form bending of soft copper and aluminum tube.

Catalog No.	Model No.	Description	Length		Tube Size Capacity (actual O.D.)		Weight	
			in.	mm	in.	mm	lb.	kg
35245	D-1375	Pack of 6 Spring-Type Benders	10	250	1/4	6	3/8	0.2
35250	D-1376	Pack of 6 Spring-Type Benders	10	250	5/16	8	1	0.5
35255	D-1377	Pack of 6 Spring-Type Benders	10	250	3/8	9	1	0.5
35260	D-1378	Pack of 6 Spring-Type Benders	12	300	7/16	11	1 5/8	0.8
35265	D-1379	Pack of 6 Spring-Type Benders	12	300	1/2	12	2 5/8	1.2
35270	D-1380	Pack of 6 Spring-Type Benders	12	300	5/8	16	3 1/4	1.5
35275	D-1381	Pack of 6 Spring-Type Benders	12	300	3/4	19	3 3/4	1.7
35280	D-1382	Pack of 6 Spring-Type Benders	12	300	7/8	22	4 1/8	1.9

## Spring-Type Bender Sets

Catalog No.	Model No.	Description	Weight	
			lb.	kg
35285	E-5732	Set of 6, 1/4"-5/8" (6 mm - 16 mm)	1 3/4	0.8
35290	E-5734	Set of 8, 1/4"-7/8" (6 mm - 22 mm)	3	1.4

# Tube Expanders



## Model S Tube Expander

- This single-stage expander is designed to expand tubing for fast, accurate joints in soft copper, aluminum, and soft steel tube without using fittings. The mechanism is free-floating and self-centering.

Catalog No.	Model No.	Description	Tube Size Capacity (actual O.D.)	Nominal Tube Capacity	Weight	
			in.	in.	lb.	kg
30032	7	Kit with 1/2", 5/8", 7/8" Heads and Case	-	-	6	2.7
34152	8	Kit with 3/8", 1/2", 3/4", 1" Heads and Case	-	-	6 1/2	0.0
15071	S	Expander Handle	-	-	1 1/2	0.7
10251	-	Expander Head	3/8	1/4	1/2	0.3
10261	-	Expander Head	1/2	3/8	1/2	0.3
10271	-	Expander Head	5/8	1/2	1/2	0.3
10281	-	Expander Head	3/4	5/8	1/2	0.3
10291	-	Expander Head	7/8	3/4	1/2	0.3
10301	-	Expander Head	1	-	1/2	0.3
10311	-	Expander Head	1 1/8	1	1/2	0.3
10321	-	Expander Head	1 1/4	-	1/2	0.3
51206	-	Expander Head	1 3/8	-	1/2	0.3
10341	-	Expander Head	1 1/2	-	1/2	0.3
10351	-	Expander Head	1 5/8	1 1/2	1/2	0.3
10361	-	Expander Head	1 3/4	-	1/2	0.3
58747	-	Replacement Case	-	-	3	1.4

Note: Kit Head sizes are given by Tube O.D.