

Wax Free Toilet Seal The quick, clean and easy way to install toilets.

Not only is it quick, clean and easy, but it is the only toilet seal that lets you *"feel the seal."* As you lower the toilet onto the flange you can feel the unique sealing rings of the Wax Free Toilet Seal compress and seal against the inside walls of the drain pipe. NO mess. NO guess. Just confidence in a reliable seal. After all, it's made by Fernco.

Introducing the newly redesigned **FTS-4**



Simplified part number selection: If you have a 4" drain pipe, use the FTS-4; If you have a 3" drain pipe, use the FTS-3.

- Improved fit in 4" cast iron and copper pipe means no more restriction with scale and build up in old drain lines.
- The new design of the FTS-4 provides a water and gas tight seal in 3 ½" flanges and 4" drain pipe:
- The FTS-4 works with:
 - All 4" Drain Pipe
 - 4x4 Closet Flanges
 - 4x3 Closet Flanges Connected to 4" Pipe
 - 4" Wall Carriers





Canada PH: 519-332-6711 FX: 519-332-8610 T1814

United States PH: 810-503-9000 FX: 810-503-1015

3/14

www.fernco.com

Wax Free Toilet Seal



The quick, clean and easy way to install a toilet.

Not only is it quick, clean and easy, but it is the only toilet seal that lets you "feel the seal." As you lower the toilet onto the flange you can feel the unique sealing rings of the Wax Free Toilet Seal compress and seal against the inside walls of the drain pipe. NO mess. NO guess. Just confidence in a reliable seal. After all, it's made by Fernco.




FTS TECHNICAL SPECS

- Seals on floors raised above the flange by up to 3/4"
- No need for flange risers or stacked wax rings
- Ideal for in-floor radiant heat systems
- Impervious to mold and mildew
- · Centers itself and the toilet to the drain
- Toilet can be removed and reinstalled with the same Fernco Wax Free Toilet Seal still attached
- Made of flexible PVC conforming to ASTM A 1045





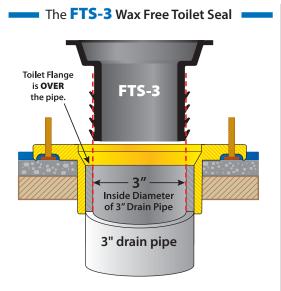

rollet Flange is OVER the pipe. FTS-4 COR FTS-4 FTS-4 FTS-4 FTS-4 FTS-4 COR FTS-4 SV2" COR FTS-4 CO

The **NEW FTS-4** Wax Free Toilet Seal

FTS-4 Is also Ideal for most 4" Closet Wall Carriers



TOILET HORN MUST BE CLEAN BEFORE INSTALLATION

- 1. Remove old wax with a putty knife
- 2. Clean away any remaining wax
- 3. Use Rubbing Alcohol on a towel or rag to remove any remaining wax
- 4. Dry surface completely before installing the Wax Free Toilet Seal