


PVLV VISOR INSTALLATION INSTRUCTIONS

***FOR USE WITH PVL, PRS, PGM, PGS-A, PGS-B, PGL
PERIMALITER II® AND PERIMASHIELD II® WALL PACKS**

1. Remove door frame (1) from wall pack.
2. Position visor (2) over door frame (1) as shown.
3. Ensure that visor is flush with edge of door frame.
4. Install clip (3) in 2 places as shown on both left and right side of door frame. Clip should sandwich side wall of door frame and visor. Ensure that clip is pushed on so that clip and visor is flush with edge of door frame side wall.
5. Re-install door frame.

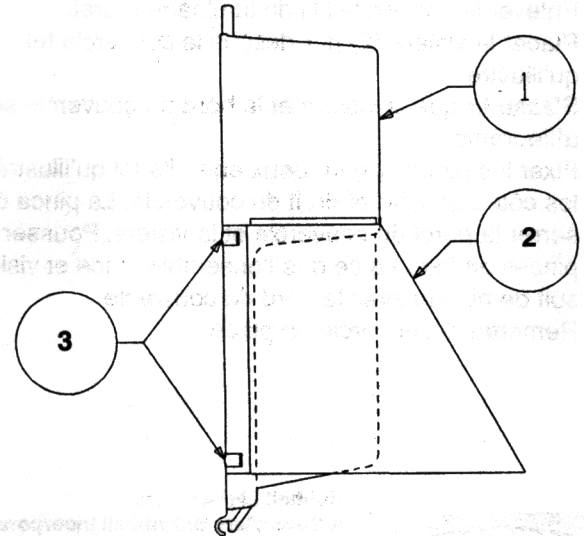

Hubbell Lighting, Inc.
A Subsidiary of Hubbell Incorporated
2000 Electric Way
Christiansburg, VA 24073-2500
(540) 382-6111
FAX (540) 382-1526

268-1115-9901