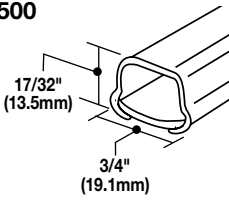
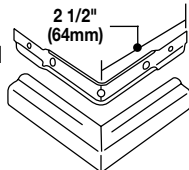
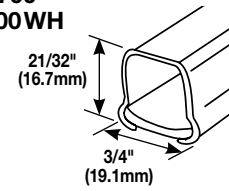


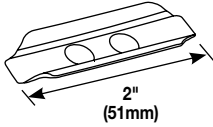
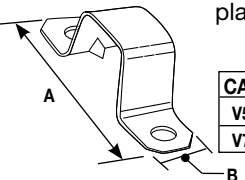

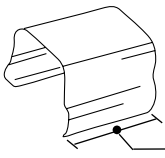
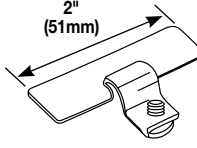
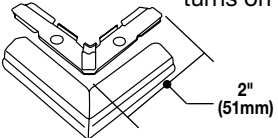
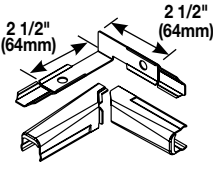
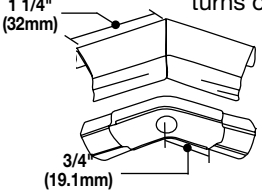
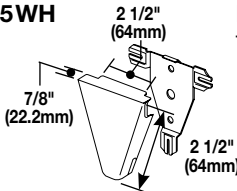
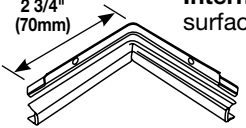


500 & 700 Series Raceway & Fittings Ordering Information

| Catalog No./Item | Description/Specifications | Catalog No./Item | Description/Specifications | | | | | | | | | | |
|---|--|---|---|---|---|------|---------------|---------------|------|---------------|---------------|--|---|
| V500  | Raceway – .040" (1.0mm) steel. Comes in 10 ft. (3.05mm) lengths, one 5701 Coupling furnished with each length. Five ft. (1.525m) lengths available, order V500-5. | V518 V718 718WH  | External Elbow – For outside surfaces at right angles. | | | | | | | | | | |
| V700 700WH  | Raceway – .040" (1.0mm) steel. Comes in 10 ft. (3.05mm) lengths, one 5701 Coupling furnished with each length. Five ft. (1.525m) lengths available, order V700-5. | V5700F  | Flexible Section – For getting around difficult angles. End fittings and bulk conduit lengths available. Maximum painted length 3' (915mm) longer lengths furnished unpainted, consult factory for availability. | | | | | | | | | | |
| 502 702  | Bushing – Protects wires from abrasion. Bushing slips into open end of raceway where it enters a fitting. | 5701  | Coupling – For joining and supporting lengths of V500 or 700 Series raceway. One coupling supplied with each length. | | | | | | | | | | |
| V504 V704 704WH  | Mounting Strap (1- or 2-Hole) – Convert to one-hole by breaking off at score. Lanced tab holds strap in place while fastening to surface. | <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th>CAT. #</th> <th>A</th> <th>B</th> </tr> </thead> <tbody> <tr> <td>V504</td> <td>1 7/8" (47mm)</td> <td>1/2" (12.7mm)</td> </tr> <tr> <td>V704</td> <td>1 7/8" (47mm)</td> <td>5/8" (15.4mm)</td> </tr> </tbody> </table> | CAT. # | A | B | V504 | 1 7/8" (47mm) | 1/2" (12.7mm) | V704 | 1 7/8" (47mm) | 5/8" (15.4mm) | 5703  | Supporting Clip – For supporting lengths of V500 or 700 Series raceway at any point desired. |
| CAT. # | A | B | | | | | | | | | | | |
| V504 | 1 7/8" (47mm) | 1/2" (12.7mm) | | | | | | | | | | | |
| V704 | 1 7/8" (47mm) | 5/8" (15.4mm) | | | | | | | | | | | |
| V506 V706 706WH  | Connection Cover – To cover openings where lengths of V500 or 700 Series, not squarely cut, come together. | 5709  | Ground Clamp – Provides additional grounding or to ground remotely located devices. Attach ground wire to screw as required by NEC. Insert into V500 or 700 Series raceway before installing. | | | | | | | | | | |
| V511 V711 711WH  | 90° Flat Elbow – For right angle turns on same surface. | V5711LHA V5711RHA 5711LHAWH 5711RHAWH  | Internal Twisted Elbows – For 90° twist with 90° turn including a flat run on sidewall to a flat run on ceiling or on door edge or window trim. Break out crescent twistout in cover to use with 700 Series. | | | | | | | | | | |
| V512 V712  | 45° Flat Elbow – For diagonal 45° turns on same surface. | V5715 5715WH  | Tee – For branches at right angles. Break out crescent twistout in cover to use with V700. | | | | | | | | | | |
| V517 V717 717WH  | Internal Elbow – For inside surfaces at right angles. | | | | | | | | | | | | |

NOTE: Use #6 flat head screws with all fittings requiring screws except V504/V704, and V57200 Series; with V504/V704 use #8 pan head screws; with V57200 Series use #8 flat head screws.