



# Assembly Instructions For **F2286/1** (E) 10/07

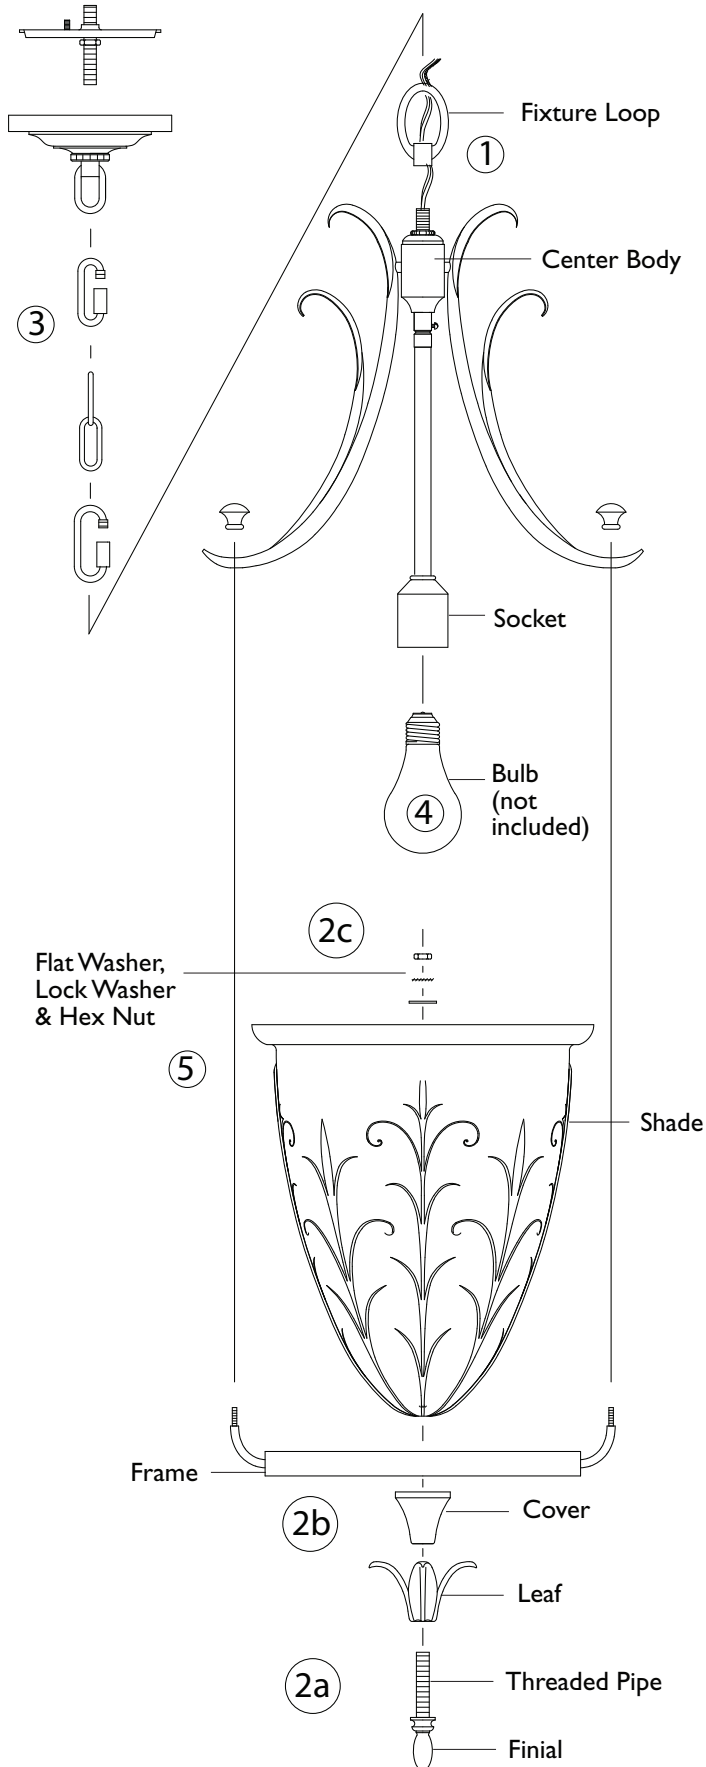

**IMPORTANT**  
**TURN OFF THE POWER AT THE MAIN FUSE OR**  
**CIRCUIT BREAKER BOX**  
**BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly.  
Bulb not included.

1. Thread fixture wires, located at top of center body, through fixture loop. Install loop by screwing into center body.
2. A. Slip leaf and cover through the threaded pipe located at finial.  
B. Then slip the threaded pipe, along with leaf and cover, through hole at bottom of glass shade.  
C. Slip flat washer and lock washer from above onto the protruding threaded pipe. Secure all together by fastening with a hex nut. **IMPORTANT: Do not over tighten.**
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
4. Install bulbs (not included). See relamping label located at socket area for type and maximum allowed wattage.
5. Lay glass shade onto metal frame and fasten frame onto bottom of arms by locking securely with cap nuts from top.

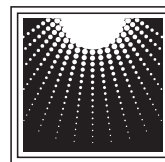

**MURRAY**  
**F E I S S**  
Generation Brands™