



# Assembly Instructions For **F2289/3** (E) 10/07

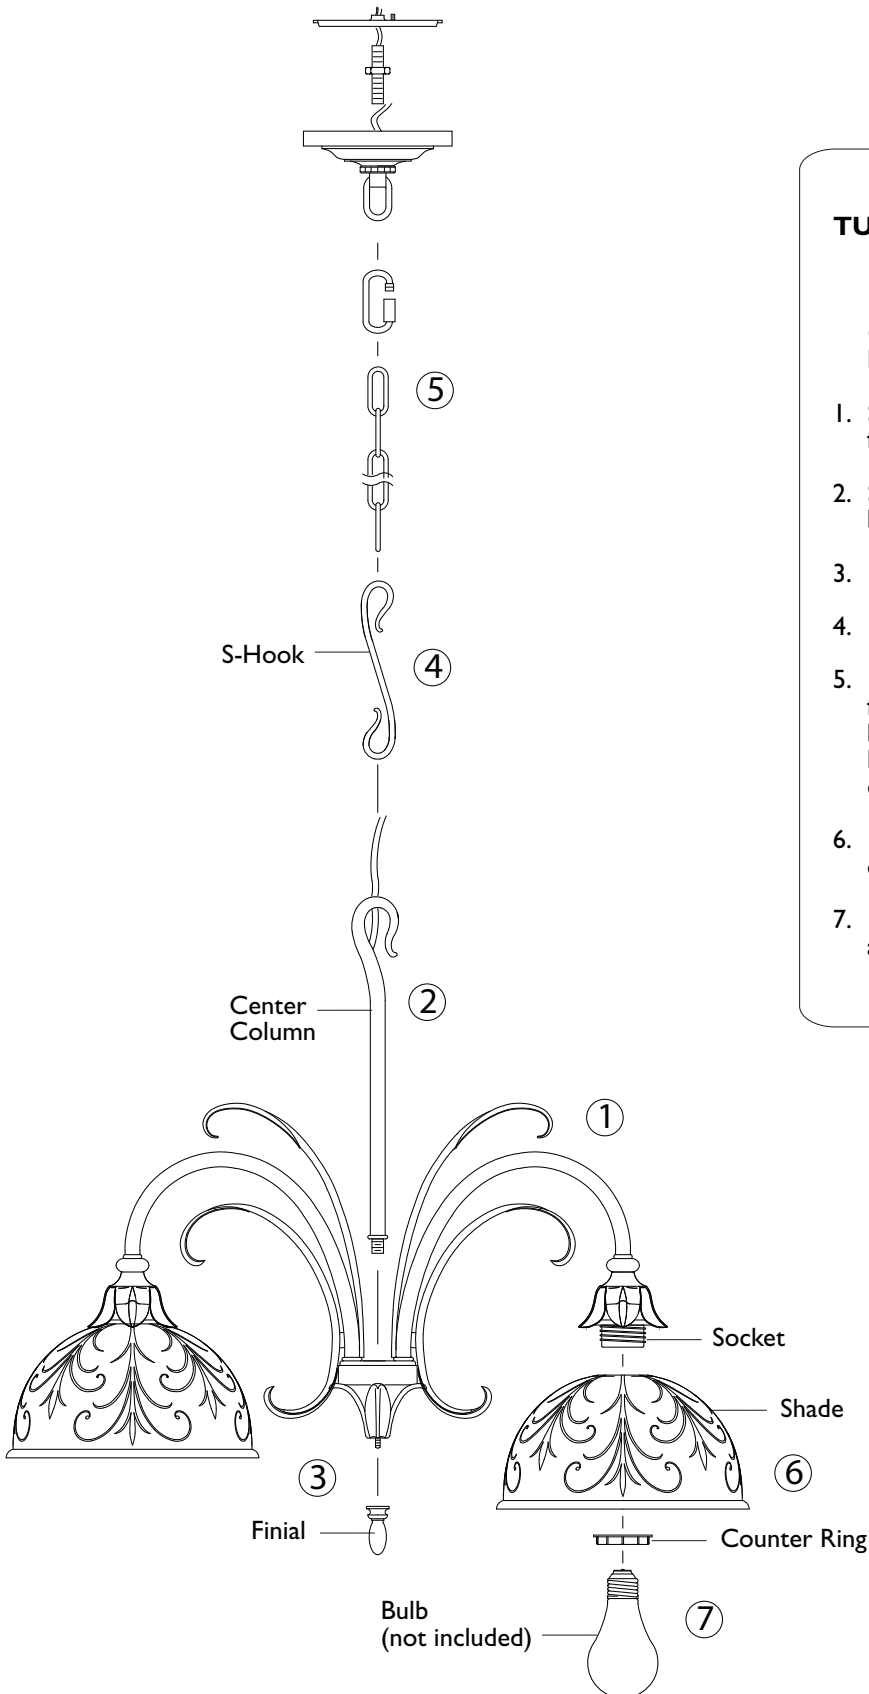

**IMPORTANT**  
**TURN OFF THE POWER AT THE MAIN FUSE OR**  
**CIRCUIT BREAKER BOX**  
**BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly.  
Bulb not included.

1. Spread open arms so they are evenly spaced apart from each other.
2. Slip center column through fixture wires. Then install by screwing into top of fixture.
3. Install finial by screwing onto bottom of fixture.
4. Install S-hook by hooking onto fixture loop.
5. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
6. Install shades onto fitters by fastening counter rings onto threaded sockets.
7. Install bulbs (not included). See relamping label located at socket area for type and maximum allowed wattage.

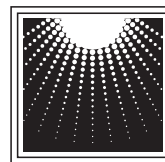

**MURRAY**  
**F E I S S**

Generation Brands™