
Assembly Instructions For F2355/4 (E) 4/08

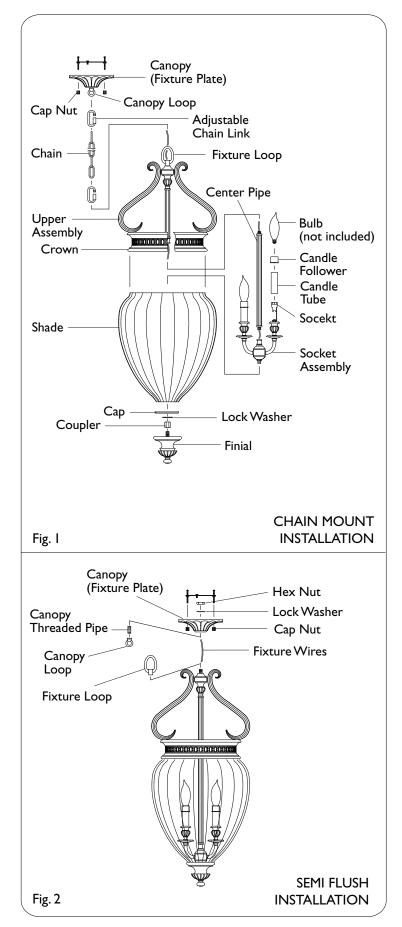

IMPORTANT TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulb not included.

- A. While pulling fixture wires from above, install bottom end of center pipe by screwing into socket assembly.
 B. While pulling fixture wires from above, install top end of center pipe by screwing into upper assembly.
 C. Slip candle tube over socket.
 - D. Install candle follower over candle tube.

E. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.

2. This fixture can be mounted onto ceiling either as chain hung or flush mount:

CHAIN HUNG INSTALLATION- Fig. I: A. If Fixture loop is separated from top assembly: Thread fixture wire and ground wire through fixture loop. Then install fixture loop by screwing into top threaded pipe. B. At this point, determine the desired length of chain to hang. Remove any unwanted links with chain pliers C. This fixture is supplied with 2 adjustable chain links. These links are opened and closed by twisting cylinder on chain link. One adjustable chain link should be installed onto canopy loop. And another adjustable chain link installed onto the fixture loop. The standard chain should be installed in between these 2 threaded chain links. D. Take ground wire and weave through above chain links, then thread through center hole in canopy loop. Repeat with

- FLUSH INSTALLATION- Fig. 2:
- A. Remove and discard fixture loop.

fixture wire (wire with plastic insulation).

B. Remove and discard canopy loop and threaded pipe from canopy.

C. Thread fixture ground wire and fixture wire through canopy, flat washer, lock washer, and hex nut. Lock all together on top of fixture by tightening hex nut onto top threaded pipe.

- 3. Cut excess wires leaving only 6" (15 cm) length of wires above canopy. Split fixture wire into two strands. Then strip off 3/4"(19mm) of outer plastic insulation.
- 4. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
- 5. A. Carefully slip shade through socket assembly until top rim of shade checks inside of crown. While holding firmly, slip cap underneath and lock them into position by fastening with a lock washer and coupler.
 B. Install finial by screwing into coupler.

