
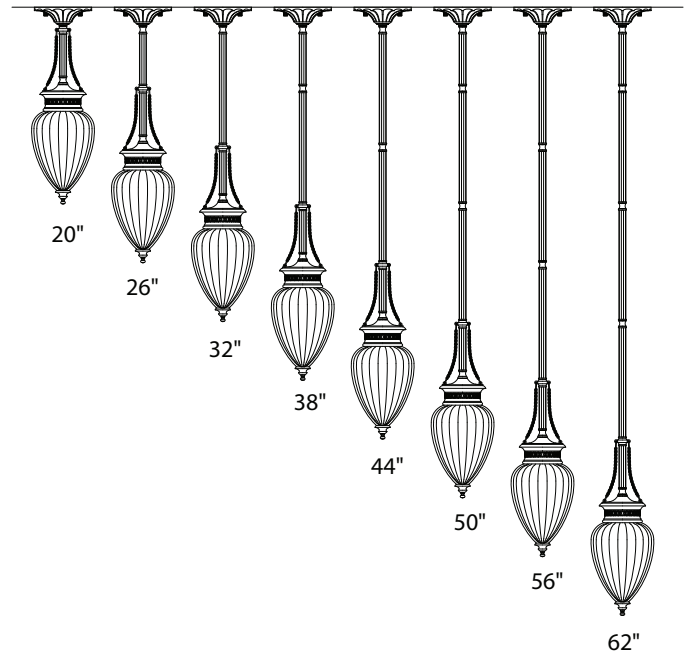


# Assembly Instructions For


# P1139 (E) 3/08

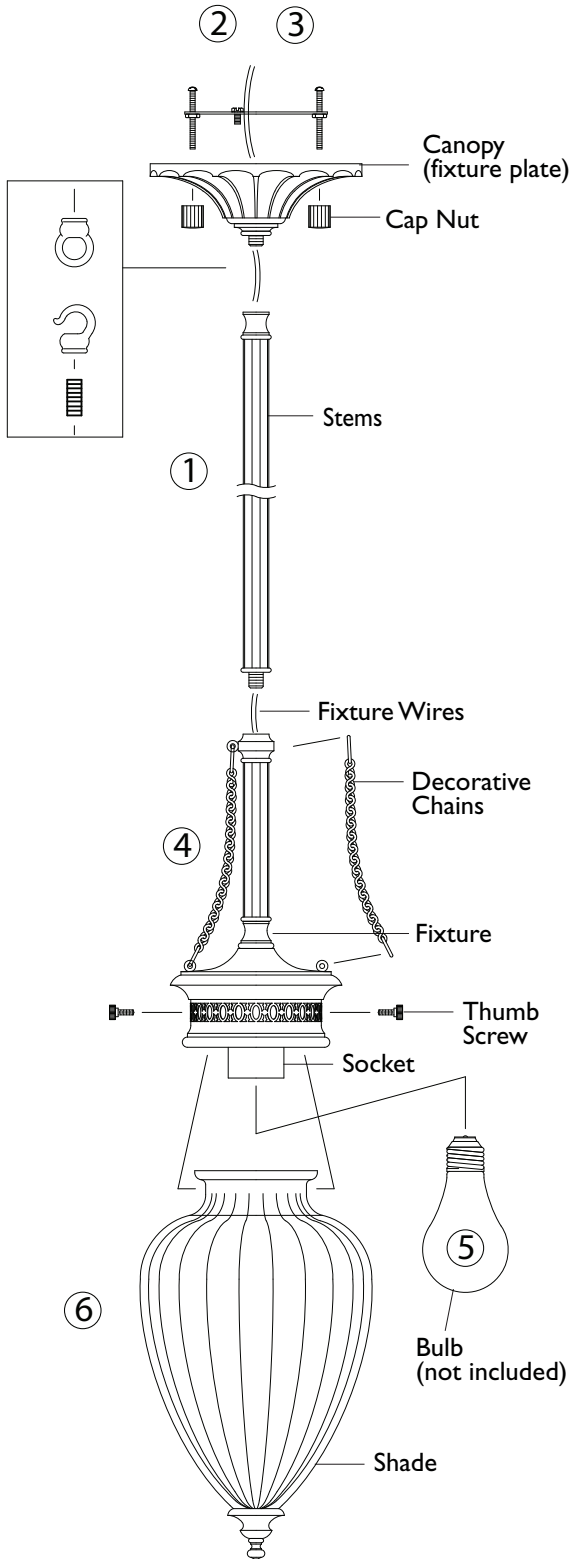

**IMPORTANT**  
**TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER**  
**BOX**  
**BEFORE STARTING INSTALLATION**

Carefully unpack and identify all parts before assembly. Bulb not included.

1. Stem hung installation:
  - A. Choose desired installation height from dimensions shown in above diagram. Thread fixture wires through each stems to be used. Note correct position of stems from left diagram. Screw all stem together until secure. Screw bottom stem into fixture coupler until secure.
  - B. FOR FLAT CEILING INSTALLATION: Thread fixture wires from top stem through canopy. Install top end of stem assembly by screwing into canopy.  
 FOR VAULTED CEILING INSTALLATION: Thread fixture wires located at top of stem assembly in following order: threaded pipe, hook, loop, and canopy. Install threaded pipe by screwing into top end of stem. Install hook by screwing onto protruding threaded pipe. Install loop by screwing onto bottom of canopy.
2. Cut excess wires leaving only 6" (15 cm) length of wires above canopy. Split fixture wire into two strands. Then strip off 3/4" (19 mm) of outer plastic insulation.
3. Follow enclosed supplement installation instructions for electrical and fixture installation onto house outlet box. If you do not have an outlet box at desired location to attach the fixture than hire a qualified electrician to create one.
4. Install decorative chains by hooking onto tiny loops located at fixture.
5. Install bulb (not included). See relamping label located near socket area for type and maximum allowed wattage.
6. Install shade by locking with thumb screws.

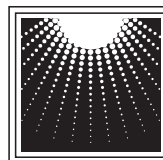

**MURRAY**  
**F E I S S**

Generation Brands™