# **Terminal Boxes**

# **Technical Data**


Model Number <sup>1</sup>	Replacement Parts	Lug Cover Number Lugs		Cabinet Cabin		et Dimensions (inches)		Knockout	
Model Nulliber	Lug Assembly	Kit <sup>3</sup>	of Bars	Per Bar	Size	Height (A)	Width (B)	Depth (C)	Figure
T1206	NI60B2	TBK100A	3	4	7 x 10	10	7-1/4	4	1
T1210	NI100B2	TBK100A	3	5	9 x 17	17-1/2	9-3/4	3-1/2	2
T1220	NI200	TBK200A	3	6	14 x 21	21-1/2	14-1/2	4-3/4	3
T1240UL	198B8615G1	TBK400A	3	5	16 x 29	29-1/2	16	5	4
T3210	NI100B2	TBK200A	4	5	9 x 17	17-1/2	9-3/4	3-1/2	2
T3220	NI200	TBK100B	4	6	14 x 21	21-1/2	14-1/2	4-3/4	3
T3610	NI100B2	TBK100B	4	5	9 x 17	17-1/2	9-3/4	3-1/2	2
T3620	NI200A5	TBK400A	4	6	14 x 21	21-1/2	14-1/2	4-3/4	3
T3640UL	198B8615G2	TBK400A	4	5	16 x 29	29-1/2	16	5	4

<sup>&</sup>lt;sup>1</sup> All models include closure plate. Order conduit hub separately. <sup>2</sup> Use large style universal hub.

#### **Hubs** (Order Separately)


Hub Opening	Midwest	Universal Hub Number		
(inches)	Hub Number	Small	Large	
3/4	B07	_	_	
1	B10	U10	_	
1-1/4	B12	U12	_	
1-1/2	B15	U15	_	
2	B20	U20	U27	
2-1/2	B25	U25	U28	
3	_	_	U30	
3-1/2	_	_	U35	
4	_	_	U40	
Closure Plate	B01	U01	U04	


# **Cabinet Dimensions**




<sup>\*</sup> See model specific dimensions in Technical Data table above.

# **Knockout Configurations**

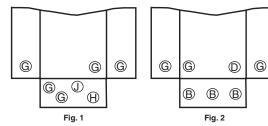

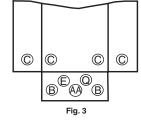

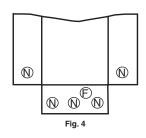

#### **Knockout Key**

AA = 1-1/2", 2", 2-1/2" B = 1", 1-1/4", 1-1/2" = 1-1/4", 1-1/2", 2" = 3/4", 1", 1-1/4" Ε = 3/4" F = 1/2", 3/4" G = 1/2", 3/4", 1" H = 1/2", 3/4", 1", 1-1/4", 1-1/2" N = 2", 2-1/2", 3" = 1"

<sup>&</sup>lt;sup>3</sup> Terminal boxes manufactured prior to 2013 can be retrofitted to comply with NEC 314.28 E(4). Order quantity (1) kit per terminal box.

<sup>\*</sup> Knockouts shown for size not for exact positions.

#### **Post Kits**

Ein	Madal Number	Chulo	Vit Components	Dimensions (inches)		
Fig.	Model Number	Style	Kit Components	Height	Width	Depth
A	EK126	Post Extension	(1) Post extension bracket, (2) 1/2" bolts, (2) 1/2" nuts, (4) 1/2" flatwashers	18	6	2
A	EK1291	FUSI EXTENSION		18	9	2
В	MS62	Post Stake	(1) Post stake bracket, (2) 1/2" bolts, (2) 1/2" nuts, (4) 1/2" flatwashers	44	3	1

<sup>&</sup>lt;sup>1</sup> Add "CW" for WEPCO approved model.



# TV/Telephone Add-On

#### **Features**

- Bolts on to back of pad mount post, earth burial post or wall at ground level
- Open back and bottom for easy wiring access
- TV/Telephone receptacle may be field replaced with data (Cat5) or other similar feature receptacle
- Includes in use cover

Model Number	Components	Dim	UL		
woder Number	Components	Height	Width Depth		OL
TTV001 <sup>1</sup>	Empty opening at	18	5	4-1/2	Z
TTV001T <sup>1,2</sup>	12" high				
TTV100 <sup>1</sup>	RJ11 Phone Jack				
TTV100T <sup>1,2</sup>	(12" high)				
TTV150 <sup>1</sup>	RJ45 Ethernet Connector				
TTV150T <sup>1,2</sup>	(12" high)				



# **Bolt-on Hub**

#### **Threaded**

Hub Opening	Midwest	Universal Hub Number		Std
(inches)	Hub Number	Small	Large	Pkg.
3/4	B07	_	_	
1	B10	U10	_	
1-1/4	B12	U12	_	
1-1/2	B15	U15	_	
2	B20	U20	U27	10
2-1/2	B25	U25	U28	10
3		_	U30	
3-1/2		_	U35	
4	_	_	U40	
Closure Plate <sup>1</sup>	B01	U01	U04	



### Stabilizer Kits

Fig.	Model Number	Style	Wire Install (direction)	Size (inches)
С	FBEM9	Stabilizer Base Kit (Earth Burial Installation)	Back Only	9
D ·	SFEM6	Stabilizer Foot Kit	Side or Back	6
	SFEM9	Stabilizer Foot Kit	Side of Back	9



Fig. C FBEM9



Fig. D SFEM6, SFEM9

<sup>&</sup>lt;sup>1</sup> Unit is non-NEMA.

<sup>&</sup>lt;sup>2</sup> Unit is used with ParkMate models and tan in color.

<sup>&</sup>lt;sup>1</sup> Closure Plate is standard with most Midwest products.