



Note: The defrost sensor provided with this kit may be longer than the one provided with the original defrost control board. Neatly gather and secure all excess wiring, keeping it away from hot refrigeration components, moving parts, or sharp edges.

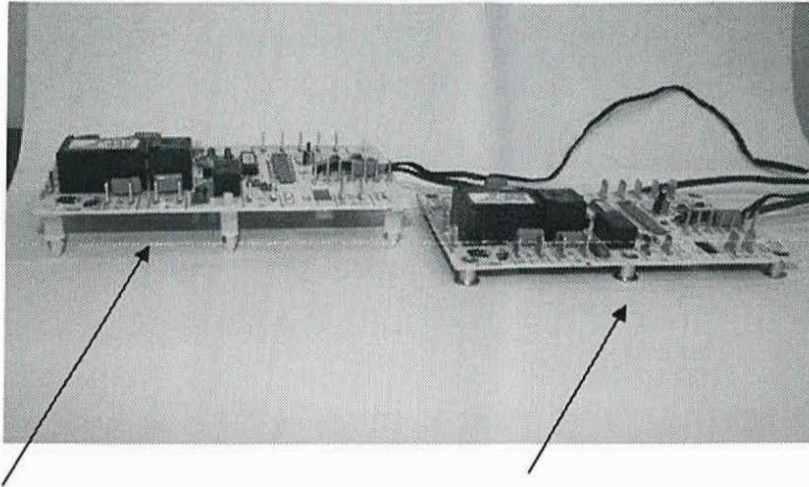

Defrost Control Board with Plastic stand-offs. Installed on all JAZ heat pump models with date codes of M1707 or later.

Defrost Control Board with Metal stand-offs. Installed on all JAZ heat pump models with date codes prior to M1707.

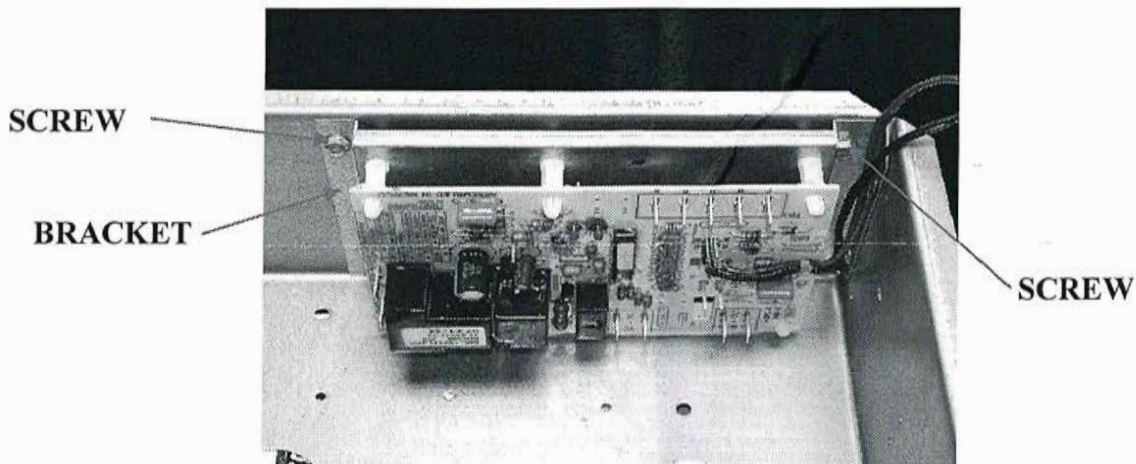

1. If the heat pump is manufactured prior to date code M1707, remove the old control board and install the bracket to the inside of the control box using the 2 sheet metal screws included in the kit.
2. Align plastic stand offs with the holes located in the bracket and snap the control board into place.