




designed to be better.

436-2-7/8, 436-2-1 1/2, 436-2-2, 436-2-23/8, 436-2-3

2" [51mm] IPS Duct Round Afterset

436-2-7/8, 436-2-1 1/2, 436-2-2,
436-2-23/8, 436-2-3

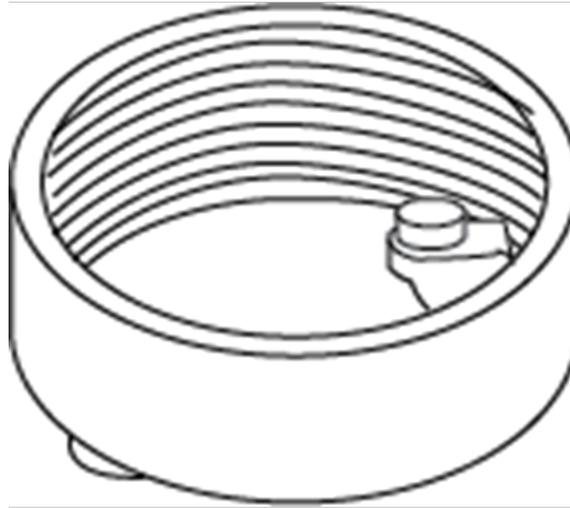

Installed either before or after concrete pour to create activation from duct. NOTE: Drill a 2 1/2" [64mm] hole in concrete and a 2 1/4" [57mm] hole in duct.

features & benefits



specifications

General Info

Product Series: Walkerduct Pro Series
Component Type: Duct Systems

Buy American Act Compliance

Country of Origin: UNITED-STATES-OF-AMERICA
Buy American Act Status: