
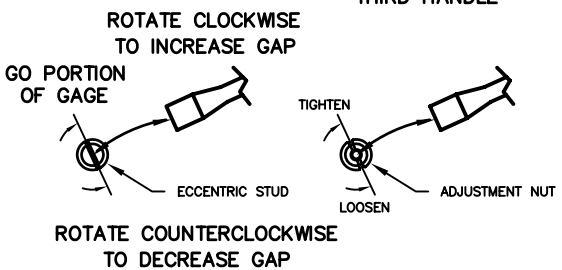
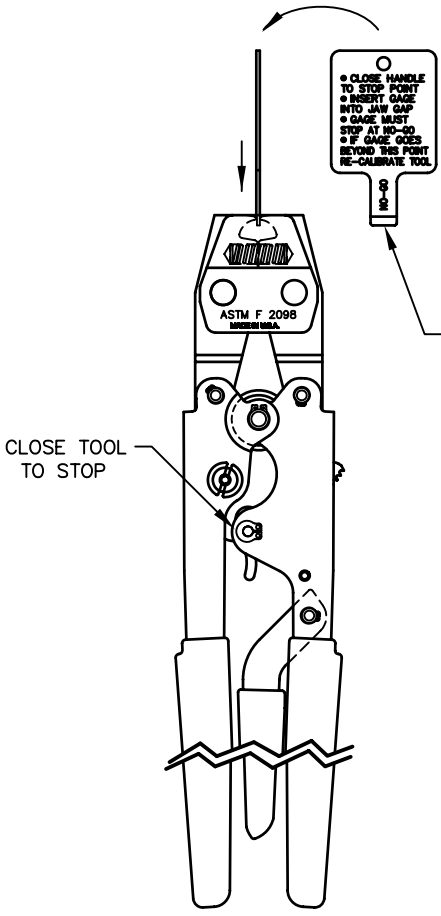


# 9252 SCP TWO HANDLE AND 9253 SCP THREE HANDLE PEX CLAMP TOOL

## CALIBRATION PROCEDURE

PATENT PENDING

● CLOSE HANDLE TO STOP POINT  
 ● INSERT GAGE INTO JAW GAP  
 ● GAGE MUST STOP AT NO-GO  
 ● IF GAGE GOES BEYOND THIS POINT RE-CALIBRATE TOOL

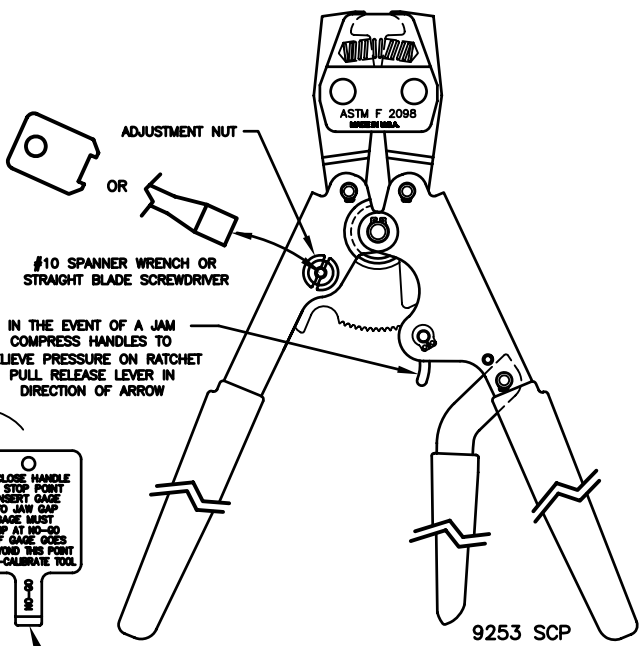

### CALIBRATION PROCEDURE

- CLOSE HANDLE TO STOP POINT.
- INSERT GAGE INTO JAW GAP.
- GAGE MUST STOP AT NO-GO
- IF GAGE GOES BEYOND THIS POINT RE-CALIBRATE TOOL.
- LOOSEN ADJUSTMENT NUT.
- PLACE GO PORTION OF GAGE INTO JAW GAP.
- ROTATE ECCENTRIC STUD COUNTER-CLOCKWISE UNTIL JAWS CONTACT GAGE.
- TIGHTEN NUT.
- CHECK TOOL CALIBRATION WITH GAGE DAILY.