



## Installation, Operation & Maintenance Instructions for the PRIER C-144/244 Diamond Series Freezeless Wall Hydrant

\*Please leave this sheet for the property homeowner\*

Thank you for purchasing the PRIER C-144/244 Diamond Series Freezeless Wall Hydrant, the finest quality freezeless wall hydrant available. Your C-144/244 will provide you years of dependable service with little or no maintenance.

### Installation:

Installation procedures may vary slightly depending on the seat option purchased and the installation inlet options. PRIER freezeless wall hydrants are available with the following inlet options:

<b>D</b>	1/2" MIP x 1/2" SWT	<b>Bore 1" Hole</b>
<b>S</b>	1/2" SWT x 3/4" Push-On	<b>Bore 1" Hole</b>
<b>F</b>	3/4" MIP x 3/4" SWT	<b>Bore 1 1/8" Hole</b>
<b>T</b>	3/4" MIP x 1/2" FIP	<b>Bore 1 1/8" Hole</b>
<b>W</b>	1/2" Wirsbo PEX®	<b>Bore 1" Hole</b>
<b>X</b>	1/2" Crimp PEX	<b>Bore 1" Hole</b>
<b>FX</b>	3/4" Crimp PEX	<b>Bore 1 1/8" Hole</b>
<b>FW</b>	3/4" Wirsbo PEX®	<b>Bore 1 1/8" Hole</b>

1. Determine the location for the installation of the hydrant. The valve must be installed into an area of the structure that will not drop below freezing. Ensure there is adequate work room in the interior of the structure for securing the hydrant to the plumbing piping. Bore the whole size listed above through the wall in the desired position for the installation.
2. All freezeless wall hydrants require a slight downward pitch to aid the draining process of the hydrant once the product is turned to the "off" position. PRIER has machined an appropriate pitch into the casted backflange to assist and ensure that a proper drainage pitch results after installation.
3. Position the spout of the hydrant in the downward position. From the interior of the structure, utilize the spout aligning mark on the seat. When the mark is pointed down, the spout is oriented in the proper position on the outside of the structure.
4. If you are planning to solder the connection (D, S or F style seats), be certain the hydrant is in the fully open position to prevent seat damage from the heat.
5. Connect the water supply piping to the freezeless wall hydrant as desired. With a closed-end hose on the valve, test the installation for leakage.
6. After the water supply connection is made, secure the hydrant to the structure using appropriate screws through the two mounting holes on the casted back flange.

### Operation:

Operation of the C-144/244 Diamond Series Freezeless Wall Hydrant is a simple process. Water flows through the hydrant after turning the handle (or operating key for the C-244 style) counter-clockwise to the "on" position. Turn off the hydrant by turning the handle clockwise to the "off" position.

The hydrant will drain for a few moments. If the dripping persists after a few moments, tighten the handle slightly until the dripping stops. Be careful not to overtighten the hydrant.

The C-144/244 incorporates an integral atmospheric anti-siphon vacuum breaker that, in the rare occurrence of a back siphonage, opens to the atmosphere preventing contamination of the water supply.

As well as an atmospheric vacuum breaker, the C-144/244 incorporates a backflow preventer that operates as a check valve in the rare case that water is forced backwards into the valve. The backflow preventer has been tested to 125 PSI pressure.

**\*ALWAYS REMOVE HOSE DURING FREEZING TEMPERATURES\***


**\*INTENDED FOR IRRIGATION USE AND OUTDOOR WATERING\***



**Maintenance:**

The PRIER C-144/244 series freezeless wall hydrant leaves the factory fully air tested and operational. It is treated with an FDA approved lubrication. The hydrant requires no scheduled maintenance to provide long life.

**Parts for C-144/244 Diamond Series Freezeless Wall Hydrant**

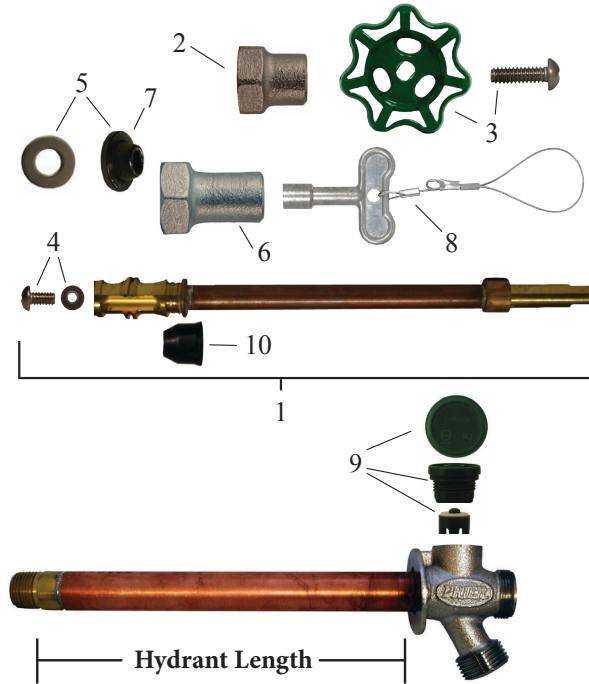

ID	Part No.	Description
1	See Chart Below	Stem Assembly
2	300-1008	Valve Stem Cap
3	C-134KT-805	Oval Handle & Screw Kit
4	C-134KT-802	Seat Washer Replacement Kit- 00 Beveled
5	C-134KT-803	Stem Packing Replacement Kit
6	310-1015	Valve Stem Cap for Loose Key
7	390-1001	Stem Packing Only
8	C-108KT-808	Oval Style Key on Lanyard
9	C-144KT-806	Vacuum Breaker Replacement Kit
10	336-0002	Backflow Check Valve for C-144
	C-134KT-804	Loose Key Conversion Kit, Contains: 5, 6, 8
	C-144KT-807	C-144 Overhaul Kit, Contains: 3, 4, 5, 9, 10

**Replacement Stems for C-144/244 Diamond Series Freezeless Wall Hydrant**



Part No.	Style	Description	Stem Length
231-12CC	G	Close Coupled Stem for C-144 Hydrant	4 <sup>3</sup> / <sub>8</sub> " OAL
231-1204	G	Stem for 4" C-144 Hydrant	6 <sup>7</sup> / <sub>8</sub> " OAL
231-1206	G	Stem for 6" C-144 Hydrant	8 <sup>7</sup> / <sub>8</sub> " OAL
231-1208	G	Stem for 8" C-144 Hydrant	10 <sup>7</sup> / <sub>8</sub> " OAL
231-1210	G	Stem for 10" C-144 Hydrant	12 <sup>7</sup> / <sub>8</sub> " OAL
231-1212	G	Stem for 12" C-144 Hydrant	14 <sup>7</sup> / <sub>8</sub> " OAL
231-1214	G	Stem for 14" C-144 Hydrant	16 <sup>7</sup> / <sub>8</sub> " OAL
231-1216	G	Stem for 16" C-144 Hydrant	18 <sup>7</sup> / <sub>8</sub> " OAL
231-1218	G	Stem for 18" C-144 Hydrant	20 <sup>7</sup> / <sub>8</sub> " OAL
231-1220	G	Stem for 20" C-144 Hydrant	22 <sup>7</sup> / <sub>8</sub> " OAL
231-1222	G	Stem for 22" C-144 Hydrant	24 <sup>7</sup> / <sub>8</sub> " OAL
231-1224	G	Stem for 24" C-144 Hydrant	26 <sup>7</sup> / <sub>8</sub> " OAL
231-12US	G	*Universal Replacement Stem for C-144 Hydrant	Up to 16 <sup>7</sup> / <sub>8</sub> " OAL